




KALMAN HAFNER

Start a Job Precision Legend 2.0




→ STEP 1: Copy the print file (*filename.mnf) to a USB Drive's root folder

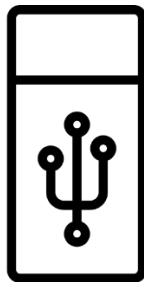


→ STEP 2: Insert the USB Drive with the print file at the back of the printer



→ STEP 3: Press PRINT

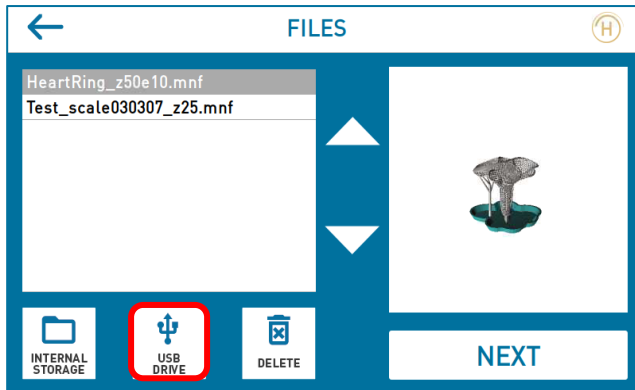


→ STEP 4: Press **USB DRIVE**

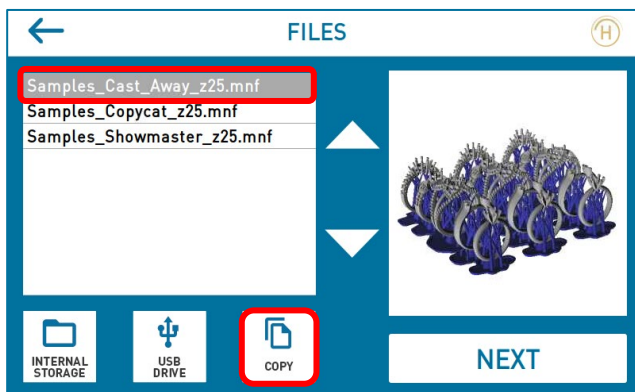


→ STEP 5: Press the print file
(*filename.mnf)

→ STEP 6: Press **COPY**

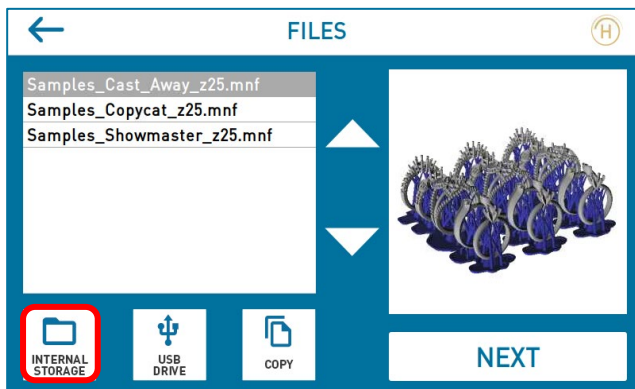


→ STEP 7: Press **INTERNAL STORAGE**

iNOTE: Now you can remove the USB drive at the back of the printer

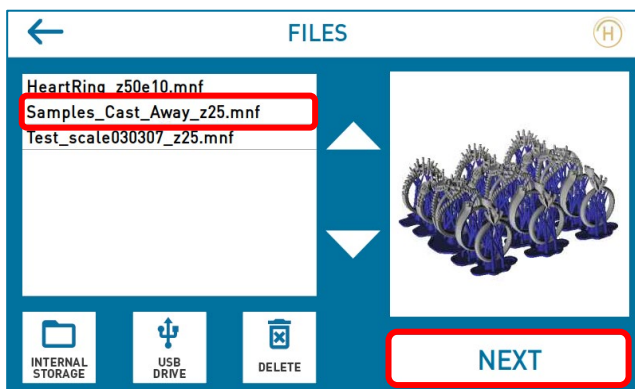


→ STEP 8: Press the print file
(*filename.mnf)

→ STEP 9: Press **NEXT**

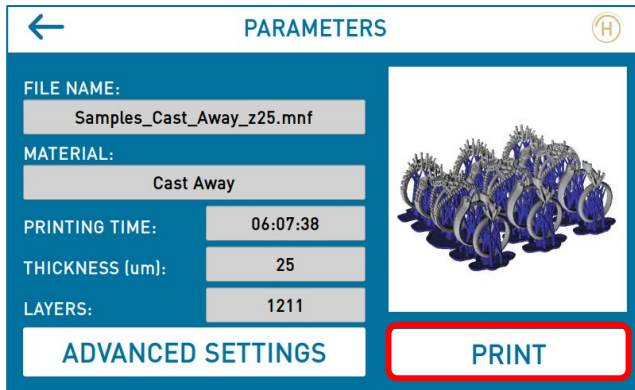

→ STEP 10: Press **PRINT**

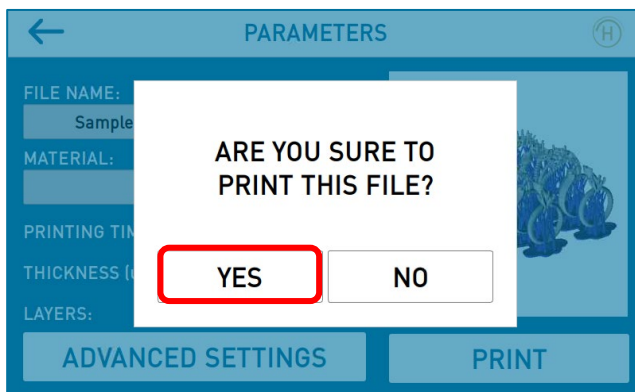

→ STEP 11: Press **YES**